



**MS600 Installation Instruction:**

1. Mark the position of urinal / WC pipe.
2. Use 6mm drill bit to drill a hole on urinal / WC pipe.
3. Insert the rubber nipple onto the 6mm hole as diagram below:

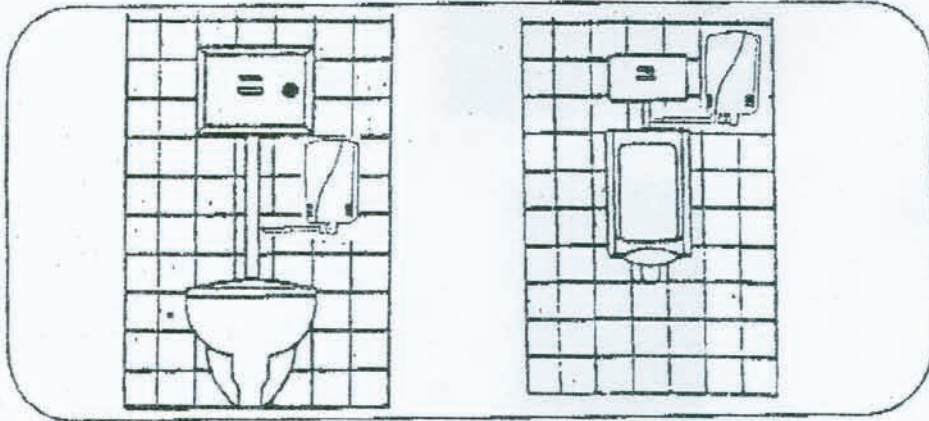


4. If install at urinal 16mm pipe, you have to cut the nipple by 5mm as diagram below:

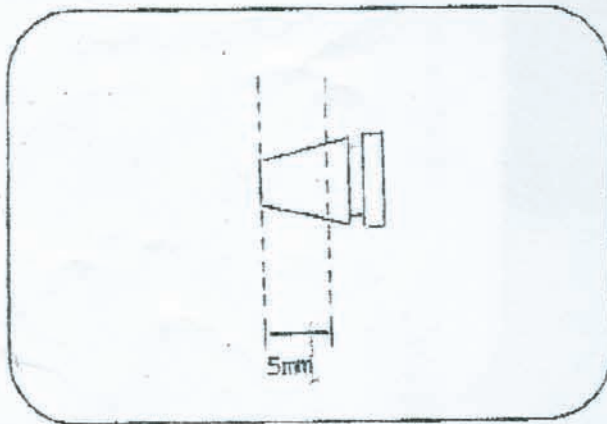

**Note:**

Use penknife to cut.

5. Insert the pipe and make sure that the sanitizer pipe is in upright position as diagram:

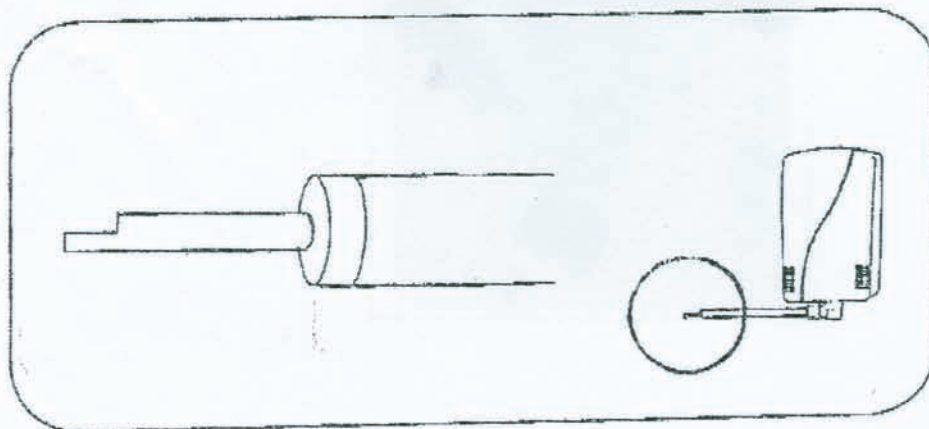

6. Use hostafon (PTPE) sealing tape if necessary